# CLAMP ON POWER HITESTER 3169

# HIOKI

# Offering a new approach to energyrelated measurement

such as energy conservation, ISO14001 testing, equipment diagnosis, and harmonics measurement.



- Measure up to two 3-phase, 3-wire systems (displays voltage and current for three lines) Measure up to four single-phase, 2-wire systems
- 0.5 A to 5000 A range
- Compact and light weight
- PC card data storage
- Power recording for individual waveforms
- Simultaneous recording of demand values and harmonics
- POWER LOGGER VIEWER SF1001

CLAMP ON POWER HITESTERs 3169-20 and 3169-21 measure of single-phase to three-phase 4-wire circuits with a single unit. In addition to measuring standard parameters such as voltage, current, power, power factor, and integrated values, these clamp-on power meters can simultaneously perform demand measurements required for carrying out power management and energy-saving measures, as well as harmonic measurements. With greater data processing speeds, it is possible to measure the power of just a few cycles, enabling more detailed and effective energy-saving measures for equipment. The 3169-20 and 3169-21 are ideal for users who want to achieve close control over energy-saving management activities and measures.


#### Introducing 2 new variations with a thinner cable!

- Thin cable type





CT9667-03 Cable diameter φ13 mm(0.51") CT9667-01, -02 Cable diameter

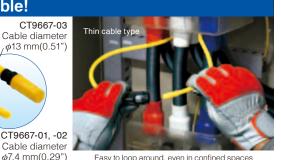

Easy to loop around, even in confined spaces

CT9667-01 φ100 mm (3.94"), 5000A AC

CT9667-02 φ180 mm (7.09"), 5000A AC

CT9667-03 φ254 mm (10.00"), 5000A AC

- Large-diameter type



# Measure power lines of up to four systems (with a common voltage)

One single unit can measure four circuits (single-phase 2-wire), two circuits (3-phase, 3-wire), or a one circuit (3-phase, 4-wire)system.

#### A wide range of measurement functions

The **3169**-20/21 can simultaneously measure voltage, current, power (active, reactive, and apparent), integrated power, power factor, and frequency. Further, when using 3-phase, 3-wire (3P3W2M) mode, you can display the voltage and current for all three lines by measuring just two of them. When using the 3-phase, 4-wire (3P4W4I) mode, neutral line current can be displayed using 4 current measurement.

#### Equipped with ranges from 0.5 A to 5000 A

The power meters support seven types of clamp-on current sensors to enable measurement for a variety of items, from CT terminals to large current and thick power lines.

#### Supports high-speed data storage from individual waveforms

When using the standard mode to perform integrated power measurement, you can store data in intervals starting from one second, and when simultaneously measuring integration and harmonics, in intervals starting from one minute. When in the fast mode, you can store RMS data for individual waveforms.

#### PC Card compatible plus internal hard drive for extra memory

Store valuable measurement data in convenient PC cards. The internal memory (1 MB) supports measurement over extended periods and detailed measurement parameters.

#### Multi-language Compatibility

Select from nine languages, including Japanese and English.

#### Detect incorrect connection using vector diagrams

Use the vector display on the connection confirmation screen to check the phase, whether a connection is loose, or whether the clamp-on sensor connection has been reversed during VT/CT terminal measurement.

#### Polarity display and measurement using the reactive power measurement method

The units come equipped with a polarity display for checking LAG/ LEAD when measuring power factor or reactive power. Further, you can select the reactive power measurement method, or display the phase factors for RMS values and power comparison.

#### High-speed D/A output

The **3169-21** comes equipped with 4-channel high-speed D/A output to enable analog output of RMS values for individual waveforms.

#### Ideal for power and harmonics management

The power meters come equipped with a harmonics measurement function that supports measurement of 3-phase power lines. They can also perform simultaneous measurement of harmonics and demand values, enabling both power and harmonics management.

# The ultimate in clamp-on power meters!



External I/O terminal pin placement

 Pin
 Signal name
 Pin
 Signal name

 1
 Start/stop input
 4
 Data storage input

 2
 Free
 5
 GND

 3
 Status output

### **Range Configuration Table**

Use the CONNECTION CABLE 9440 to connect to external devices.

		CLAMP ON SE	NSOR 9695-02	CLAMP ON SENSOR 9661							
			(CAT III 300V)		(5A, 10A, 50A, 100A, 500A)						
	Current	(500mA, 1A, 5	A, 10A, 50A)	L							
		CLAMP ON SENSOR 9694 (CAT III 300V) (500mA, 1A, 5A)		CLAMP ON SENSOR 9660, 9695-03 (CAT III 300V) (5A, 10A, 50A, 100A)							
Voltage 🔪	Connection	500.00mA	1.0000A	5.0000A	10.000A	50.000A	100.00A	500.00A			
	Single-phase 2-wire	75.000 W	150.00 W	750.00 W	1.5000kW	7.5000kW	15.000kW	75.000kW			
150.00V	Single-phase 3-wire Three-phase 3-wire	150.00 W	300.00 W	1.5000kW	3.0000kW	15.000kW	30.000kW	150.00kW			
	Three-phase 4-wire	225.00 W	450.00 W	2.2500kW	4.5000kW	22.500kW	45.000kW	225.00kW			
	Single-phase 2-wire	150.00 W	300.00 W	1.5000kW	3.0000kW	15.000kW	30.000kW	150.00kW			
300.00V	Single-phase 3-wire Three-phase 3-wire	300.00 W	600.00 W	3.0000kW	6.0000kW	30.000kW	60.000kW	300.00kW			
	Three-phase 4-wire	450.00 W	900.00 W	4.5000kW	9.0000kW	45.000kW	90.000kW	450.00kW			
	Single-phase 2-wire	300.00 W	600.00 W	3.0000kW	6.0000kW	30.000kW	60.000kW	300.00kW			
600.00V	Single-phase 3-wire Three-phase 3-wire	600.00 W	1.2000kW	6.0000kW	12.000kW	60.000kW	120.00kW	600.00kW			
	Three-phase 4-wire	900.00 W	1.8000kW	9.0000kW	18.000kW	90.000kW	180.00kW	900.00kW			

Current		CLAMF	AP ON SENSOR 9669		<ul> <li>Current</li> </ul>	AC FLEXIBLE CURRENT SENSOR CT9667-01, -02, -03			
Voltage	Voltage Connection		200.00 A	1.0000kA		Voltage	Connection	500.00 A	5.0000kA
	Single-phase 2-wire	15.000kW	30.000kW	150.00kW			Single-phase 2-wire	75.000kW	750.00kW
150.00V	Single-phase 3-wire Three-phase 3-wire	30.000kW	60.000kW	300.00kW		150.00V	Single-phase 3-wire Three-phase 3-wire	150.00kW	1.5000MW
	Three-phase 4-wire	45.000kW	90.000kW	450.00kW			Three-phase 4-wire	225.00kW	2.2500MW
	Single-phase 2-wire	30.000kW	60.000kW	300.00kW		300.00V	Single-phase 2-wire	150.00kW	1.5000MW
300.00V	Single-phase 3-wire Three-phase 3-wire	60.000kW	120.00kW	600.00kW			Single-phase 3-wire Three-phase 3-wire	300.00kW	3.0000MW
	Three-phase 4-wire	90.000kW	180.00kW	900.00kW	1		Three-phase 4-wire	450.00kW	4.5000MW
	Single-phase 2-wire	60.000kW	120.00kW	600.00kW			Single-phase 2-wire	300.00kW	3.0000MW
600.00V	Single-phase 3-wire Three-phase 3-wire	120.00kW	240.00kW	1.2000MW	6	600.00V	Single-phase 3-wire Three-phase 3-wire	600.00kW	6.0000MW
	Three-phase 4-wire	180.00kW	360.00kW	1.8000MW			Three-phase 4-wire	900.00kW	9.0000MW

Note 1: The range configuration table displays the full-scale display values for each measurement range. Note 2: In the table, "unit W" has been replaced with "VA" or "var" for the apparent-power and reactive power measurement ranges. Note 3: Voltage and current input values 0.4% or less than the measurement range are displayed as "zero". When either the voltage or current for the power line is zero, the power value is displayed as zero. Note 4: You can display measurement values up to 130% of each measurement range.

### Measure hidden power waste through secure connections, simple measurement methods, and detailed data capture.

# **Promises reliable measurement for power demand** requirements!


## Select from a variety of data, including detailed and harmonics data for multiple circuits

#### ★ To measure multiple systems simultaneously

4

A single unit can measure two three-phase, 3-wire systems. Further, you can make individual clamp-on sensor and current range settings for each system.

Also, in addition to performing simultaneous measurement for up to four systems (single-phase, 2-wire) with a common voltage, you can set the current range individually for each system. Setting the most suitable current range for both large and small loads allows you to acquire more accurate measurements.

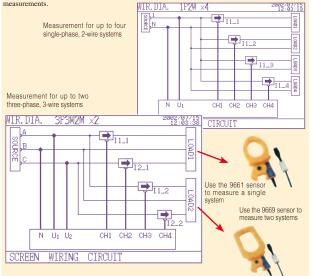

#### Magnetic voltage adapters for hard-to-clip terminals New magnetic voltage adapters convertible with the Voltage Cords L9438-53 let

you accurately detect voltage when the circuit terminals are too shallow for alligator clips to latch on






generally compatible with M6 pan screws

#### ★ Simultaneous power and harmonics management

Use a single unit to simultaneously measure data for power and harmonics.

#### All acquired data can be saved onto a PC card.

Power data (including demand data) and harmonics data can be simultaneously saved onto a PC card or in the unit's internal memory. Further, data for all of the systems being measured can be saved when measuring multiple circuits. Each of these two new unit's offers a management system for power and harmonic quality.

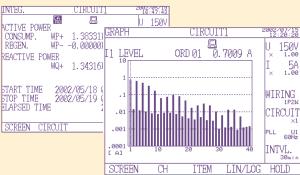


#### ★ When measurement accuracy is crucial

The addition of a vector display for viewing the connection status completes the preparation required for measurement.

Have you ever experienced incorrect measurement results?

The most common cause of incorrect data is a faulty connection. With the 3169-20/21 you can use the vector display to check the phase, whether a connection is loose, or whether the clamp-on sensor connection has been reversed.

Also, you are assured of proper connection when measuring the VT (PT)/CT terminals even if you cannot see the line you are measuring

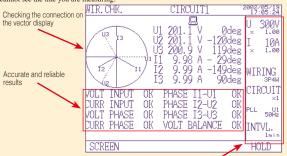

#### The basic settings are constantly displayed, allowing you to measure with confidence.

During measurement, in addition to displaying the voltage and current ranges, and VT (PT) and CT ratios for each system, the unit can also display items such as the measurement interval. Because the basic settings are constantly visible, you can be confident of obtaining the correct measurement results.

#### ★ Capture facility data quickly

#### By using continuous processing to measure individual waveforms, you can accurately measure data in a relatively short amount of time.


Use the desired measurement method to continuously measure the voltage, current, and power for individual waveforms, enabling you to obtain accurate data in one second or less. Further, you can record the maximum, minimum and average values

			NST. CIRCUIT1
MAIN           MAIN         MAX.           J1         201.11 V           J2         201.11 V           J3         201.00 V           Jave         201.06 V           P1         1.7435kW           P2         1.7462kW           P3         1.7437kW           P4         0.00000kWh           SCREEN         SCREEN	MIN. CIRC	VE. CIKC UITI 2005-05-19 10-12-29 10-200V × 1.00 I 10A × 1.00 I 10A × 1.00 I 10A × 1.00 I 10A V 30.00 I 10A × 1.00 I 10A V 10	UITI 2007

#### ★ Measure another device simultaneously

#### Using the external I/O function, you can obtain even more detailed measurements for energy conservation.

In addition to measurement start/stop control through external input, you can use this function to output the measurement start/stop signal for the 3169-20/21. Simultaneous recording of a variety of signals is also possible for equipment when using multiple devices to perform start control and multi-channel recording.

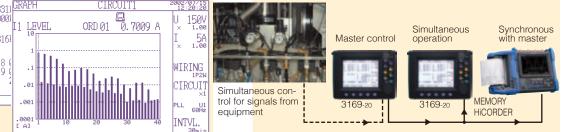

Large storage capacity to accommodate power and harmonics data for individual waveforms. Supports energy saving measures that can be carried out from your PC.


# Greater flexiblity for energy saving measures through detailed measurement!

Reduce energy consumption by "1%"! Why not try analyzing your energy saving measures?

#### ★ Save measurement details to PC card for extended measurements! Why not try a shorter data management interval?

With the 3169-20/21, you can set the data recording interval to 1 minute. If you are unsure how to proceed with energy conservation, you can use a large capacity PC card to save measurem details, then use the data to create a load fluctuation graph and analyze this to help reduce wasted power consumption.

Further, because you can save a variety of data, including simultaneous recording of power and harmonics data, waveform data storage, and print-outs of the screen, these two new units help by storing measurement details

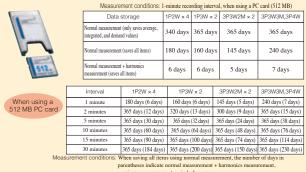


maximum measurement period of one year

#### ★ Identify even small amounts of power waste using individual waveform measurements

The 3169-20/21 can help turn you into a keen energy saving specialist.

These two new units allow you to measure power data by recording the RMS values for individual waveforms

By measuring just a few seconds of machine cycles or changes in operating patterns of facilities such as manufacturing equipment, you can grasp power fluctuations over a relatively short amount of time and view improvements in the form of numerical data. Gain unsurpassed energy savings by achieving simple improvements around the work environment

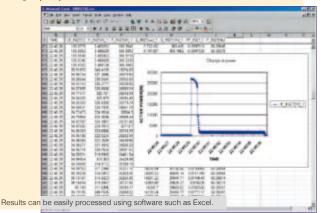


#### ★ Improve energy-saving operations and create an energy-efficient facility

Why not try to improve your energy-saving measures using the 3169-21?

Using the D/A output (4 ch) function on the 3169-21, you can simultaneously record a variety of measurement and control signals for equipment, such as the power fluctuation and temperature/flow for individual waveforms, onto a HIOKI MEMORY HICORDER or logger.

A slight reduction in power consumption due to changes in the inverter motor operating patterns or temperature settings equals to an energy-saving effect.

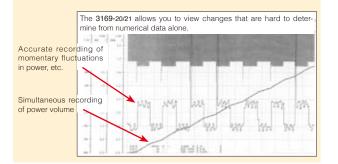


★ Unbalanced loads are an enemy to energy saving activities. Solve your problems with careful management of power lines.

#### Unbala nced 3-phase loads can result in a damaged power line


To provide detailed management of measurements, the 3169-20/21 displays voltage and current for all three lines even when measuring just two circuits (3P3W2M). Further, because the effective power for each phase is displayed based on a virtual center point when measuring the voltage and current for all three lines (3P3W3M), the units can also be used to implement energy saving measures and power management systems.

5

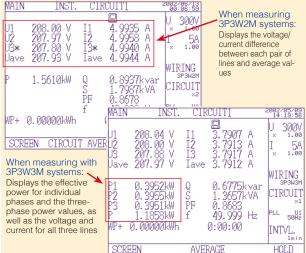

#### ★ Harmonics cause wasted power

Did you think that harmonics and energy saving activities were unrelated? Due to a spread in equipment that uses semiconductor control devices, such as inverters, power quality has decreased. Also, power consumed in harmonic components is all wasted power. Harmonic control and management are essential for energy conservation.

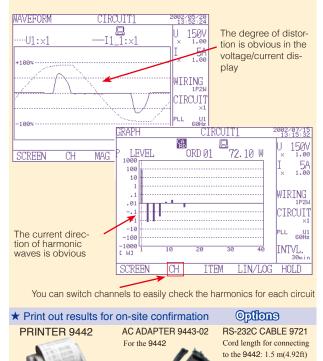

Approx.160W (6.30")× 66.5H(2.62")

× 17D(0.67") mn approx.580 g (20.5 oz.)

Dimensions and : mass

#### Input specifications

input specific	auons						
Measurement line type	Single-phase 2-wire, single-phase 3-wire, three-phase 3-wire, three-phase 4-wire						
Number of systems that can be measured (for systems that share the same voltage)	4 systems (1p2W), 2 systems (1P3W, 3P3W2M) 1 system (3P3W3M, 3P4W,3P4W4I)						
Measurement line Frequency	50/60 Hz						
Input methods	Voltage: Insolated inputs (except between U1, U2, U3 and N) Current: Isolated input using a clamp-on sensor						
Input resistance (50/60 Hz)	Voltage: 2.0 M $\Omega$ ± 10% (differential input) Current: 200 k $\Omega$ ± 10%						
Maximum input	Voltage input: 780 Vrms AC, peak value: 1103 V Current input: 1.7 Vrms AC, peak value: 2.4 V						
Maximum rated voltage to earth	Voltage input terminals: 600 Vrms AC (50/60 Hz)						
	Total display range: Within 0.4 to 130% of the range (zero is suppressed for less than 0.4%)         Effective measurement range: Within 5 to 110% of the range						
	Current           CLAMP ON SENSOR 9694         : 500m/ 1/ 5 A           CLAMP ON SENSOR 9695-02         : 500m/ 1/ 5/ 10/ 50 A           CLAMP ON SENSOR 9660         : 5/ 10/ 50/ 100 A           CLAMP ON SENSOR 9661         : 5/ 10/ 50/ 100 A           CLAMP ON SENSOR 9661         : 5/ 10/ 50/ 100 A           CLAMP ON SENSOR 9661         : 5/ 10/ 50/ 100/ 500 A           CLAMP ON SENSOR 9661         : 500/ 5k A           AC FLEXIBLE CURRENT SENSOR CT9667-01         : 500/ 5k A           AC FLEXIBLE CURRENT SENSOR CT9667-03         : 500/ 5k A           AC FLEXIBLE CURRENT SENSOR CT9667-03         : 500/ 5k A						
	Total display range: Within 0.4 to 130% of the range						
	(zero is suppressed for less than 0.4%)						
	Effective measurement range: Within 5 to 110% of the range						
	Power: 75.000 W to 9.0000 MW Depends on voltage/current combination and measured line type (see Measurement Range Configuration Tables) Total display range: Within 0 to 130% of the range						
	("0W" display indicates zero rms voltage and/or current) <b>Effective measurement area</b> : Within 5 to 110% of the range						
VT ratio settings	0.01 to 9999.99						
CT ratio settings	0.01 to 9999.99 (* A different CT ratio can be set for each system.)						

#### **Measurement Specifications**

Measurement items	Voltage, current, active power*1, reactive power*2 *3, apparent power,*4 power factor*3, integrated value, frequency, harmonics
Measurement	Voltage: ±0.2% rdg. ±0.1% f.s.
accuracy	Current: ±0.2% rdg. ±0.1% f.s. + clamp sensor accuracy
(50/ 60Hz,	Active power: ±0.2% rdg. ±0.1% f.s. + clamp sensor accuracy
power factor = 1)	Clamp-On Sensor 9661 accuracy: ±0.3% rdg. ±0.01% f.s.
, , , , , , , , , , , , ,	(Accuracy depends on clamp sensor. See page 7 for the accuracy of each model, and page 7 for combined accuracy of Model 3169-20 and each clamp sensor.)
Display update rate	Approx. 0.5 sec (except when using a PC card while accessing the internal memory, or when performing RS-232C communications)
Display averaging circuit	OFF, 2, 5, 10, 20 times (for movement averaging)
Measurement method	Simultaneous digital sampling of voltage and current, PLL synchronization or a fixed clock (50/60 Hz)
Sampling frequency	128 points/cycle
A/D converter resolution	16bits
.1	

\*1 Polarity display: For consumption: no symbol, for regeneration: "-"

\*1 Polarity display: For consumption: no symbol, for regeneration: "-"
 \*2 Using the reactive power measurement method: ON: Measures the reactive power directly using the reactive power measurement method, OFF: Calculates the reactive power from the measurement values for voltage, current, and active power
 \*3 Polarity display: For lag phase (LAG: current is slower than voltage): no symbol, For lead phase (LEAD: current is faster than voltage) : "-" (Reactive power measurement method "ON")

\*4 Polarity display: No polarity

#### **General Specifications**

Operating environment	Indoors, up to 2000 m (78.74 ft) ASL, Pollution degree 2
Operating temperature and humidity	0 to 40°C, 80% RH or less (non-condensating)
Storage temperature and humidity	-10 to 50°C, 80% RH or less (non-condensating)
Withstand voltage (50/60 Hz for 15 sec.)	<b>5.55 kVrms AC</b> : Between the voltage input terminal and the 3169 casing, <b>3.32 kVrms AC</b> : Between the voltage input terminal and the current input terminal/external interface terminal, <b>2.3 kVrms AC</b> : Between the power supply and the 3169 casing, <b>1.39 kVrms AC</b> : Between the power supply and the current input terminal/external interface terminal
Power supply	100 to 240 V AC, 50/60 Hz, Maximum rated power: 30VA
Dimensions and mass	Approx.210(8.27")W × 160(6.30") H × 60D(2.36") mm (excluding protrusions), Approx.1.2 kg(42.3oz.) (3169-20, 3169-21)
Conforming standards	Safety: EN61010,measurement category III (anticipated transient overvoltage 6000V) EMC: EN61326 ClassA, EN61000-3-2, EN61000-3-3
Accessories	voltage cord set L9438-53 (1) (1 cord each of black, red, yellow, and blue), voltage cord (1), input cord label (1), operating manuals (2) (Advanced edition and Quick Start Guide), CD-R (1) (RS-232C interface operating manuals and CSV conversion Software), connection cable 9441 (1) (for the 3169-21 only)

#### **Measurement screen**

Instantaneous value display	Voltage, current, active power, reactive power, apparent power, power factor, frequency, average voltage, average current, (average values are for each system)
Average value display	Voltage, current, active power, reactive power, apparent power, power factor, frequency, average voltage, average current * The average value from the beginning of time series measurement until the present
Maximum/minimum value display	Voltage, current, active power, reactive power, apparent power, power factor, frequency * The maximum/minimum value from the beginning of time series measurement until the present
Integrate display	Integrated value Active power (consumption/regeneration) Reactive power (lag/lead) * The total integrated value from the beginning of time series measurement.
Demand volume display (Integrated value within the specified interval)	Integrated value Active power volume (consumption/regeneration) Reactive power volume (lag/lead) * The integrated value within each specified interval (latest value).
Demand value display (average value within the specified interval)	Active power (consumption), reactive power (lag), power factor * The demand value within each specified interval (previous value).
Maximum demand value display (average value within the maximum specified interval)	The maximum demand value since the beginning of time series measurement and the time and date it occurred.
Harmonics list	List of the items measured for the specified harmonic (numerical value). (including the total value and total harmonic distortion factor (THD-F/THD-R))
Harmonics graph	Bar graph or vector diagram of the items measured for the specified harmonic. (cursor measurement, magnification update, with a linear/LOG axis selection function)
Waveform display	Voltage and current waveforms (with a magnification update function)
Measurement value enlargement display	Select and enlarge up to 5 items from the instantaneous value display.

#### **Recording Specifications**

Data output destinatio	PC card 9728, internal memory, or printer 9442						
Output Interval	Standard interval: 1, 2, 5, 10, 15, or 30 seconds, or 1, 2, 5, 10, 15, 30, or 60 minutes *Maximum measurement period: 1 year Fast interval: A single waveform, or 0.1, 0.2, or 0.5 seconds *Only instantaneous values are output						
Storage format	Measurement data: CSV format (binary format when using the fast inter- val setting) Waveform data:Binary format Screen data:BMP format Settings data:CSV format						
Measurement start method	Manual or time (year, month, day, hour, minute)						
Measurement stop method	Manual, time, or timer (1 seconds to 8784 hours)						
Data output item							
Instantaneous values	Voltage, current, active power, reactive power, apparent power, power factor, frequency, average voltage, average current, (average values are for each system) * The instantaneous value for interval output.						
Average value	Voltage, current, active power, reactive power, apparent power, power factor, frequency, average voltage, average current, (average values are for each system) * The average value for each interval.						
Maximum/ minimum value	Voltage, current, active power, reactive power, apparent power, power factor, frequency * The maximum/minimum value for each interval (no event details provided).						
Integrated value	Active power (consumption/regeneration), Reactive power (lag/lead) * The total value since the beginning of time series measurement, and the power volume for each interval.						
Demand value	Active power (consumption), reactive power (lag), power factor * The value for each interval.						
Maximum demand value	The maximum demand value since the beginning of time series measurement and the time and date it occurred.						
Harmonic	Each order harmonic wave (level, content percentage, and phase angle), total value, THD-F/THD-R: the instantaneous, maximum, minimum, and average values for each recording interval						
Waveform	Waveform (Voltage or current)						
Status information	Exceeds the voltage/current crest factor, PLL unlock, power failure, exceeds the display limit						
Print items	Numerical values: Prints the data selected as the data output item (during time series measurement). Waveform: Hard copy of the screen (printing of each interval not available)						

#### **External Interface Specifications**

PC card	Up to 528 MB, settings data, measurement data, screen data, waveform data
D/A output (3169-21 only)	Number of output channels: 4 channels           Output items           For instantaneous values:Voltage, current, average voltage, average current, Active power, reactive power, apparent power, power factor, frequency, For Integrated value:Active power (consumption/ regeneration) or reactive power (lag/lead), For harmonics:Each harmonic order (level, content percentage, and phase angle), total value; THD-F/THD-R           Output level: ±5 V DC/f.s.         Output resistance: 100Ω±5%           Output update rate: For each cycle of measurement input (when a measurement input (when harmonics is set). For every 16 cycles of measurement item)
RS-232C	Printer 9442 or PC connected to an RS-232C interface
External I/O	Control input: Start/stop control for time series measurement, data storage Control output: LOW level is output during time series measurement. Control signal level: A 0/5 V logic signal or a short-circuit/release contact signal

#### Measurement accuracy (Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)

Voltage	Current/active power				
±0.2%rdg.±0.1%f.s.	$\pm 0.2\%$ rdg. $\pm 0.1\%$ f.s. + clamp-on sensor accuracy				

accuracy Fundamental waveform range for : 45 to 66 Hz guaranteed accuracy Display area for guaranteed accuracy

: Effective measurement area

<ul> <li>Table of current and active power accuracy with clamp-on sensor combinations</li> </ul>								
Current rang	9694	9695-02	9660, 9695-03	9661	9669	CT9667 <sup>-01</sup>		
0.5A	±0.5%rdg.±0.3%f.s.	±0.5%rdg.±2.1%f.s	-	-	-	-		
1A	±0.5%rdg.±0.2%f.s.	±0.5%rdg.±1.1%f.s	-	-	-	-		
5A	±0.5%rdg.±0.12%f.s.	±0.5%rdg.±0.3%f.s	±0.5%rdg.±0.5%f.s.	±0.5%rdg.±1.1%f.s.	-	-		
10A	-	$\pm 0.5\% rdg. \pm 0.2\% f.s$	±0.5%rdg.±0.3%f.s.	$\pm 0.5\%$ rdg. $\pm 0.6\%$ f.s.	-	-		
50A	-	±0.5%rdg.±0.12%f.s.	±0.5%rdg.±0.14%f.s.	$\pm 0.5\%$ rdg. $\pm 0.2\%$ f.s.	-	-		
100A	-	-	±0.5%rdg.±0.12%f.s.	±0.5%rdg.±0.15%f.s	$\pm 1.2\%$ rdg. $\pm 0.2\%$ f.s.	-		
200A	-	-	-	-	±1.2%rdg.±0.15%f.s.	-		
500A	-	-	-	±0.5%rdg.±0.11%f.s.	-	±2.2%rdg.±0.4%f.s.		
1000A	-	-	-	-	±1.2%rdg.±0.11%f.s.	-		
5000A	-	-	-	-	-	±2.2%rdg.±0.4%f.s.		

#### uracy of the CLAMP ON SENSOR

for 5 A) :  $\pm 0.3\%$ rdg. $\pm 0.02\%$ f.s. ted for 50 A) :  $\pm 0.3\%$ rdg. $\pm 0.02\%$ f.s.

ted for 100 A): ±0.3%rdg.±0.02%f.s.

- for 100 A) : ±0.3%rdg.±0.02%f.s.
- for 500 A) : ±0.3%rdg.±0.01%f.s. for 1000 A) : ±1.0%rdg.±0.01%f.s.
- (rated for 5000 A) :  $\pm 2.0\%$ rdg. $\pm 0.3\%$ f.s.
- $(rated \; for \; 5000 \; A): \pm 2.0\% rdg. \pm 0.3\% f.s.$
- (rated for 5000 A) : ±2.0%rdg.±0.3%f.s.
  - (500 A range: For 50 to 500 A input)

(5000 A range: For 500 to 5000 A input)

nsor's rated primary current value.

Note: The table of accuracy for different clamp-on sensor combinations indicates the measurement accuracy for each current range of the 3169-20/21. (The accuracy for each clamp-on sensor is converted and displayed according to the 3169-20/21 current measurement range.)

Apparent power accu	iracy :	±1 dgt. for the calculation obtained from each measurement value	Frequency characteristic	:	Fundamental waveforms up to the 50th order ±3% f.s. + measurement
Reactive power accu	iracy :	When using the reactive power measurement method			accuracy (of a 45- to 66-Hz fundamental waveform)
	, .	$\pm 0.2\%$ rdg. $\pm 0.1\%$ f.s. + clamp-on sensor accuracy	Temperature characteristic	:	Within ±0.03% f.s./°C
		When not using the reactive power measurement method	Effect of in-phase voltage	:	Within ±0.2% f.s. (600 Vrms AC, 50/60 Hz, between voltage input terminal and case)
		±1 dgt. for the calculation obtained from each measurement value	Effect of external magnetic field		Within $\pm 1.5\%$ f.s.
Integration accura	acy :	±1 dgt. for the measurement accuracy of effective power, reactive power,			(in a magnetic field of 400 A/m rms AC, 50/60 Hz)
		and apparent power	Power factor influence	:	±1.0% rdg.
Power factor accura	acy :	±1 dgt. for the calculation obtained from each measurement value			(45 to 66 Hz, power factor = 0.5, for effective power measurement)
Frequency accura	acy :	±0.5% rdg. ±1dgt.	Effect of reactive factor	1	$\pm 1.0\%$ rdg. (45 to 66 Hz, reactive factor = 0.5, when using the reactive power measurement method)
			Real-time clock accuracy		$\pm 10 \text{ ppm} \pm 1 \text{ second } (23^{\circ}\text{C}) \text{ (within } \pm 1.9 \text{ sec/day } (23^{\circ}\text{C}) \text{)}$

### Option Specifications

CLAMP ON SENSOR	9694	9660		9661		9669		
Appearance	Сеє САТ III 300V	Сого length: 3 m (9.84ft) САТ Ш 300V		Сат Ш 600V		Сога length: 3 m (9.84ft) САТ Ш 600V		
Primary current rating	AC 5 A	AC 10	00 A	AC 500 A		AC 1000 A		
Output voltage	AC 10mV/A	AC 1mV/A		AC 1mV/A		AC 0.5mV/A		
ACCURACY Amplitude (45 to 66 Hz)	±0.3%rdg.±0.02%f.s.	±0.3%rdg.±0.02%f.s.		±0.3%rdg.±0.01%f.s.		±1.0%rdg.±0.01%f.s.		
Phase (45 Hz to 5 kHz)	Within ±2°	Within ±1°		Within ±0.5°		Within ±1°		
Frequency characteristic	Within ±1.0% at 40		Hz to 5 kHz (deviation from accuracy)		Within $\pm 2.0\%$ at 40 Hz to 5 kHz (deviation from accuracy)			
Effect of external magnetic field	Equivalent to 0.1 A or less (with a magnetic field of 400 A/m A			l of 400 A/m AC)	Equivalent to 1 A or less (with a magnetic field of 400 A/m AC)			
Effect of conductor position	Within ±0.5%				Within ±1.5%			
Maximum rated voltage to earth	300 V rms	300 V rms		600 V rms		600 V rms		
Maximum input (45 to 66 Hz)	50 A continuous	130 A continuous		550 A continuous		1000 A continuous		
Measurable conductor diameter	Less than $\phi$ 15 mm(0.59")	Less than $\phi$ 15 mm(0.59")		Less the	less than $\phi$ 46 mm(1.81")		Less than φ 55 mm(2.17"), 80(3.15") × 20 (0.79")mm bus bar	
Dimensions and mass	46W(1.81") × 135H(5.31") × 21D(0.83") mm, 230g(9.9oz.)			· ·	.03") × 151H(5.94") × 99.5V 55")mm, 380g(12.7oz.)		5.92") × 188H(7.40") × 42D(1.65") mm, 590g(20.8oz.)	
	CT9667-01 C	T9667-02	CT966	7-03	9695-02		9695-03	
Appearance	C E Inform sensor to circuit 2m from sensor to circuit	2m from sensor to circuit Im from circuit to connector	C C 2m from	a sensor to circuit	Not CE marked CAT II 300V		Not CE marked	
Primary current rating	AC	AC 500 A, 5000A			AC 50 A		AC 100 A	
Output voltage	AC 500 mV f.s.				AC 10 mV/A		AC 1 mV/A	
Amplitude (45 to 66 Hz)	$\pm 2.0\%$ rdg. $\pm 0.3\%$ f.s. (for input 10% or more of the renge)				±0.3%rdg.±0.02%f.s.			
Accuracy Phase (45 Hz to 5 kHz)	Within $\pm 1^{\circ}$			Within $\pm 2^{\circ}$ Within $\pm 1^{\circ}$		Within ±1°		
Frequency characteristic	Within ±3 dB at 10 Hz to 20 kHz (deviation from accuracy)			Within ±1.0% at 40 Hz to 5 kHz (deviation from accuracy)				
Effect of external magnetic field	1.5% f.s. or less. (in a magnetic field of 400 A/m AC, 50/60 Hz)				Equivalent to 0.1 A or less (with a magnetic field of 400 A/m AC)			
Effect of conductor position	Within ±3.0%				Within ±0.5%			
Maximum rated voltage to earth	1000 V rms (CAT III), 600Vrms (CAT IV)				300 V rms (insulated conductor)			
Maximum input (45 to 66 Hz)	10000 A continuous				60 A continuous 130 A continuo		130 A continuous	
Measurable conductor diameter	Less than \$\$ 100 mm(3.94") Less th	an \ 180 mm(7.09")	Less than $\phi$ 254	mm(10.0")	Less than \$\$\phi\$ 15 mm(0.59")			
Dimensions and mass	Sensor thickness: $\phi$ 7.4mm (0.29" Circuit box: 35W(1.38") × 120H(4.74 280g (9.9 oz.)	Sensor thickness: ¢ Circuit box: 35W(1 120H(4.74") × 34E 470g(16.6 oz.)	1.38") ×	50g(1.8oz.)		9		
Power supply	LR06 alkaline battery × 2 (continuous operation max. 7 days) or AC ADAPTER 9445-02/ 9445-03(optional)			days)	Cord length: 3 m(9.84ft)			

#### **POWER LOGGER VIEWER SF1001 Specifications**

FOWLNLOG	GEN VIEWEN SPIDUT Specifications				
Supported models	3169,PW3365-20, PW3360-20, PW3360-21				
Supported computer operati systems	Windows 8 (32/64bit) Windows 7 SP1 or later (32/64bit) Windows Vista SP2 or later (32bit) Windows XP SP3 or later (32bit)				
Trend graph display function	<b>Visplay items:</b> Voltage, current, active power, reactive pow- r, apparent power, power factor, frequency, integrated active ower, integrated reactive power, demand volume, demand alue, voltage disequilibrium factor, pulse, harmonics (level, ontent, phase angle, total value, THD) <b>tacked bar graph display</b> : Up to 16 types of data series an be displayed in an overlay graph				
	<b>Cursor measurements:</b> Measurement values can be displayed by the cursor				
	Displayed items are the same as for the trend Graph Display				
	<b>Daily, weekly and monthly report displays:</b> Accumulates and displays daily, weekly and monthly reports over specified period.				
Summary display function	Load factor calculation display: Calculates and displays load factor and demand factor results with daily, weekly and monthly reports				
	Time span aggregation: Aggregates data into up to four specified time spans				
	<b>CO2 equivalent display:</b> Uses the specified conversion rate to display CO2 equivalent values (reference values).				
Waveform display	Displays waveform data at specified date and time				

	List display: Displays a list of harmonic data at specified date and time					
Harmonic display	<b>Graph display:</b> Displays a bar graph of harmonic data at specified date and time					
	<b>Cursor calculation:</b> Calculates measurement data at cursors in waveform and graph displays					
Copy function	Captures any display image to the clipboard					
	Preview and print content shown on the trend graph, report, harmonic graph and settings displays.					
Print function	Comment entry (Text comments can be entered in any printout)					
Print function	Header/Footer settings: Sets the header and footer for each printout					
	Printing support: Any color or monochrome printing supported by the operating system					
	Print (static) contents over a specific time period					
	Output contents: Standard or selected output items					
Report printing	<b>Available output items:</b> Trend graph, summary, daily report, harmonic list, harmonic graph, waveform					
	Report creation method: Standard print					
	Report output settings: Save/load report output settings					





 Model : CLAMP ON POWER HITESTER 3169

 Model No. (Order Code) (Note)


 3169-20 (main unit only, English model)

 3169-21 (with D/A output, English model)

 Accessories: Voltage cord L9438-53 ×1 (Black/ Red/Yellow/Blue, 3 m (9.84 ft) length, Alligator

Accessories: Voltage cold L9436-35 ×1 (Black) Red reliavely Blue, an (9.8411) (engin, Alligator clip ×4), Power cord ×1, Instruction manual ×1, Quick start manual ×1, CD-R ×1 (RS-232C interface operating manual) ×1, Input cord label ×1, Connection cable 9441 ×1 (for the 3169-21 only)

Current and power cannot be measured using the CLAMP ON POWER HiTESTER 3169-20/21 on its own. To perform current and power measurement, make sure you also purchase a CLAMP ON SENSOR (9694, 9695-02, 9695-03, 9660, 9661, CT9667-01, CT9667-02, CT9667-03, or 9669) (sold separately). Use only PC Cards (9728) sold by HIOK1. Compatibility and performance are not guaranteed for PC cards made by other manufacturers. You may be unable to read from or save data to such cards.

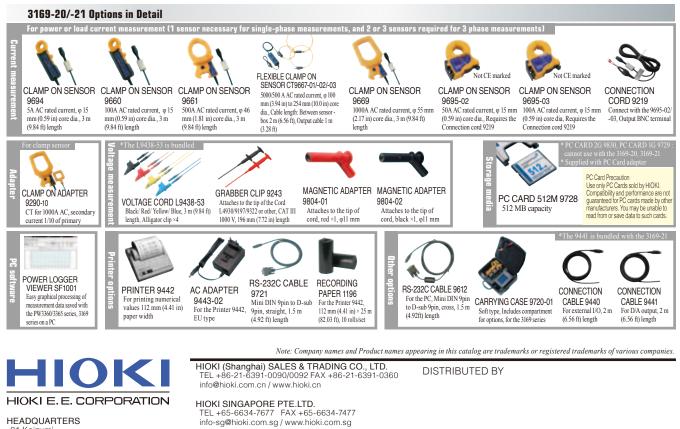

81 Koizumi Ueda, Nagano 386-1192 Japan www.hioki.com

HIOKI USA CORPORATION TEL +1-609-409-9109 FAX +1-609-409-9108 hioki@hiokiusa.com / www.hiokiusa.com HIOKI KOREA CO., LTD. TEL +82-2-2183-8847 FAX +82-2-2183-3360 info-kr@hioki.co.jp / www.hiokikorea.com

HIOKI EUROPE GmbH TEL +49-6173-31856-0 FAX +49-6173-31856-25 hioki@hioki.eu / www.hioki.com

All information correct as of Apr. 9, 2018. All specifications are subject to change without notice.